


SCORPION
EXO



COVERT FX

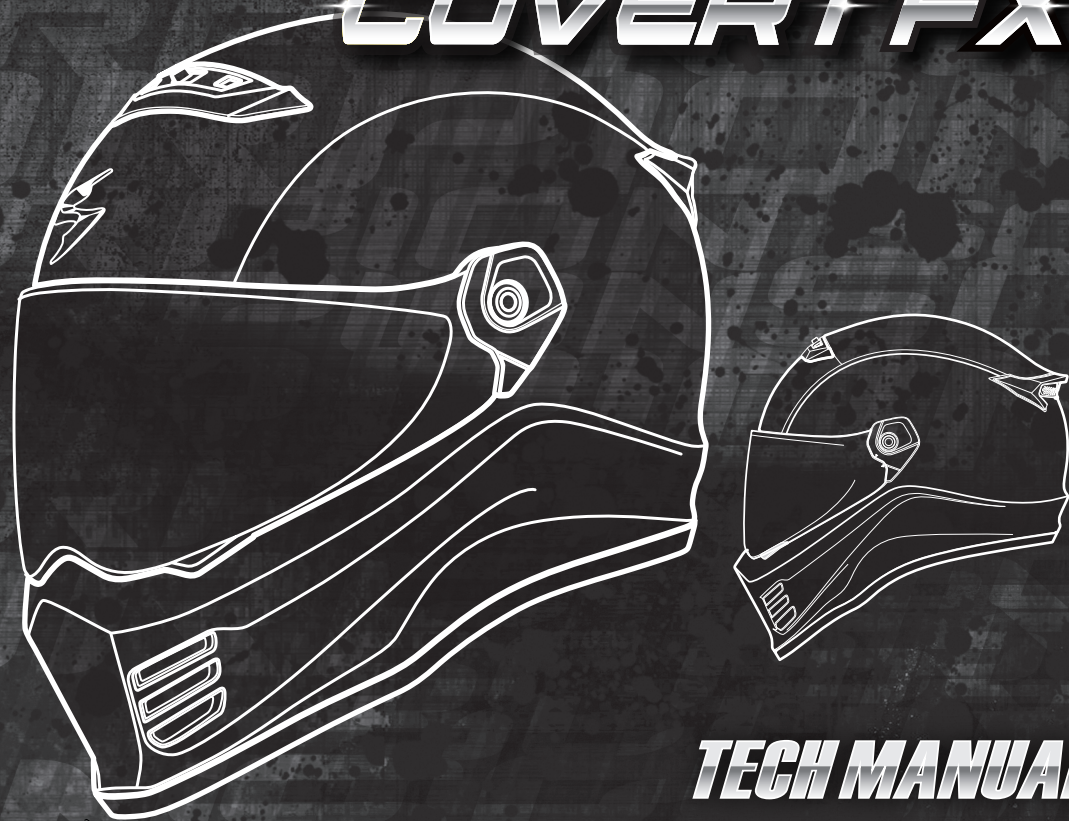

TECH MANUAL

- 1 TCT-U™ SHELL**
Scorpion's next evolution of TCT™ fiberglass technology using pre-infused fiber mats applied at precise temperatures and pressures, resulting in a lighter, stronger shell that provides superior durability and impact dissipation.
- 2 KWIKWICK® III LINER FABRIC**
The removable and washable liner features a soft and supple hypo-allergenic, anti-bacterial material with advanced moisture wicking properties.
- 3 EVERCLEAR® FACESHIELD**
Anti-Fog treated (internal) and hard coated (external) face shield provides 95% UV-A & UV-B protection.
- 4 SPEAKER POCKETS**
Speaker ducts cavity designed into the EPS allow compatibility with communication unit speakers up to 40mm.
- 5 KWIKFIT®**
Kwikfit® cheekpads allow easy on and off of the most common styles of eye glasses.
- 6 3D CONTOURED CHEEKPADS**
Plush removable and washable 3D contoured cheekpads for ultimate fit and comfort lined with our KwikWick® III Fabric.
- 7 AERO-TUNED VENTILATION SYSTEM**
Features adjustable ram-air front intake that forces fresh air through multiple internal channels and out to an integrated rear spoiler, pulling heat and humidity up and out.

TCT-
ULTRA


KWIKWICK® III
LINER

EVERCLEAR®
NO-FOG FACESHIELD




KWIKFIT®

ECE
22.06 APPROVED
DOT


FMVSS NO.218
CERTIFIED

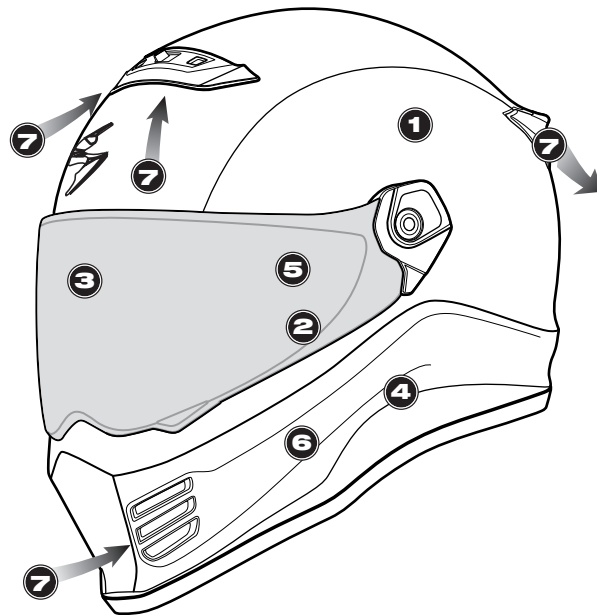


LINE ART SHOWN IN THIS MANUAL
ARE FOR REFERENCE ONLY
AND MAY VARY FROM ACTUAL PRODUCT.

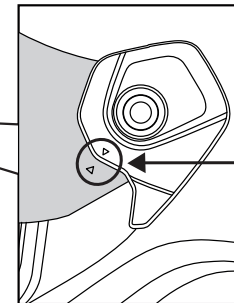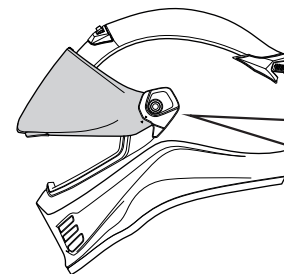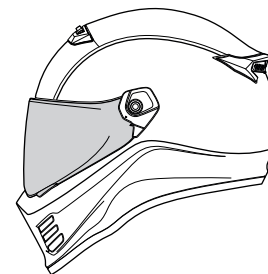


Open the face shield so the shield arrow aligns
with the side cover arrow.

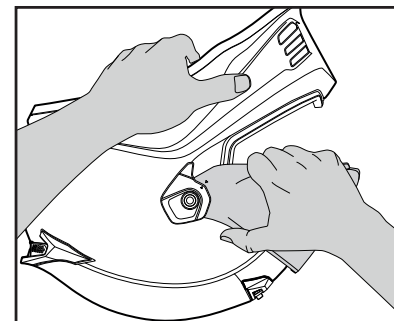

1. Grasp the shield firmly as shown.

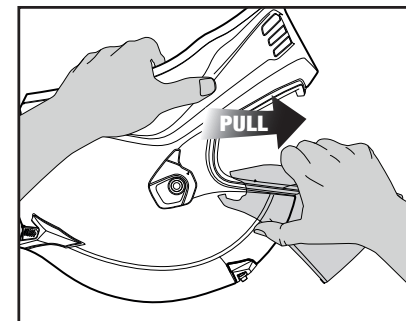


2. Pull the face shield forward as shown.

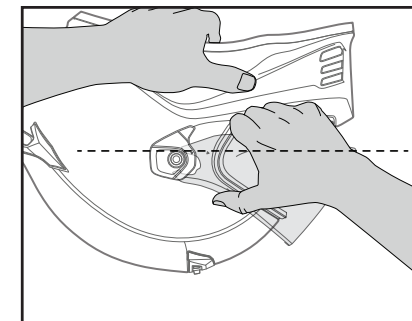

To reinstall the face shield, reverse the process
while ensuring that the triangles are aligned.

CHEEK PAD REMOVAL

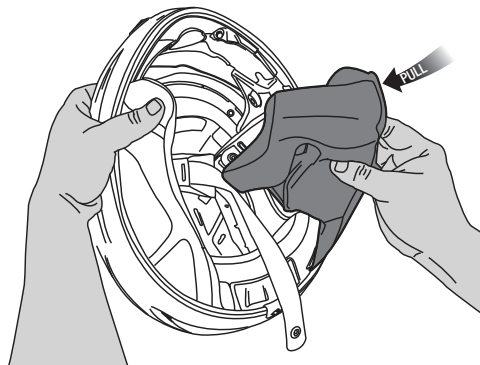


Occasionally the cheek pads may require removal for washing or replacement.

1. Remove the Aero Skirt.
2. Slide your thumb behind the cheek pad at the area closest to the AirFit inflation pump.
3. Gently tug the cheek pad away from the helmet interior wall. There are three plastic snaps that require unsnapping. At the same time slide the plastic trim out of the helmet channel.

Repeat this process for both cheek pads.
Reverse this process for installation.

CROWN LINER REMOVAL

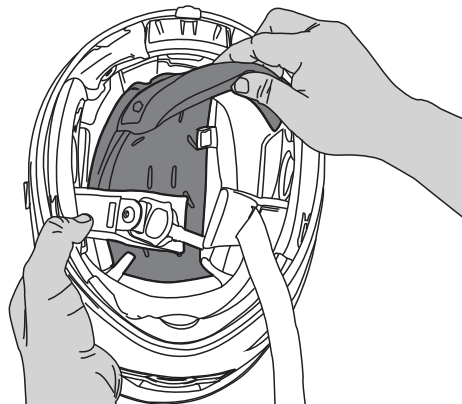


Occasionally the crown liner may require removal for washing, replacement or to change sizes.


1. Remove the cheek pads.
2. At the back of the helmet pull the crown liner away from the shell unsnapping the two snaps.
3. Pull the crown liner out of the helmet while gently detaching it from the forehead channel.

Reverse this process for installation.

CHIN BAR VENTILATION

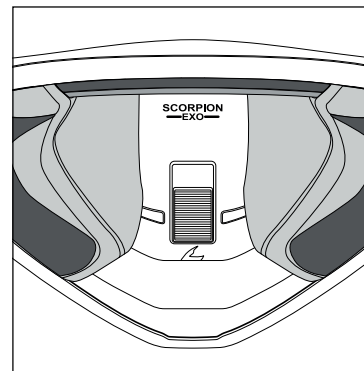


CLOSED

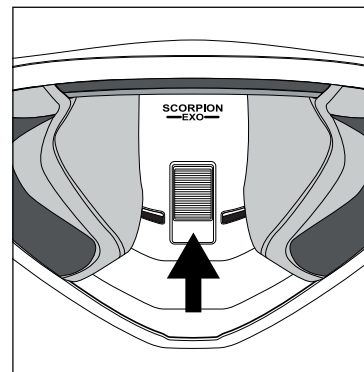

OPEN

AERO SKIRT REMOVAL

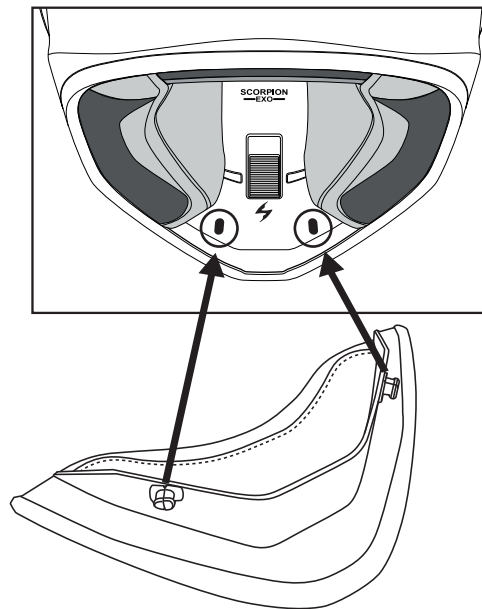

To remove aero skirt from the helmet, grab the aero skirt and unhook two male snaps.

To install aero skirt, reverse the process.